

BIOS Update Instructions

Model – R1150

R1150-S21 BIOS:

Corrects boot timing issues that may occur and cause blade to hang during boot when USB 2.0 devices connected.

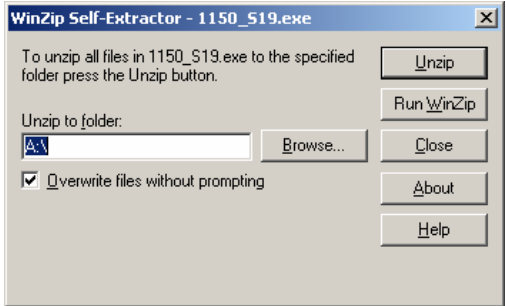

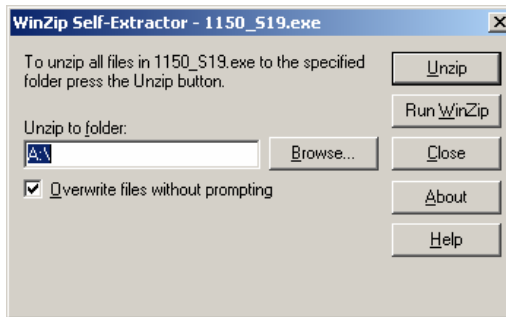
Requirements:

USB Floppy

DOS bootable floppy disk

R1150-S21.exe

Please follow the instructions in order to update the BIOS on your R-Series blade:

Step 1) Insert a DOS bootable floppy into your floppy drive.	
Step 2) Double click on R1150-S21 BIOS utility file.	
Step 3) From the WinZip Self-Extractor dialog, click the <i>Unzip</i> Button.	
Step 4) When the message "2 file(s) unzipped successfully" appears click the OK button.	
Step 5) From the WinZip Self-Extractor dialog click the close button.	
Step 6) With the floppy disk in, restart your computer.	
Step 7) Upon restart, the computer will boot from the floppy driver and automatically update the motherboard's BIOS. Follow the onscreen instructions. If you have any problems during the update process please call 866-652-3400 or e-mail support@clearcube.com for assistance.	