

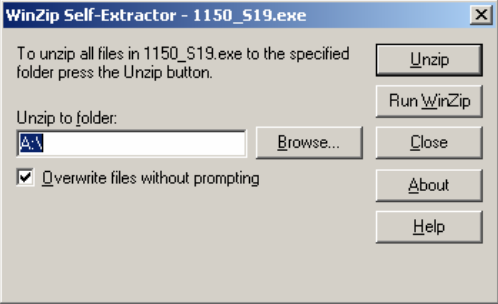 
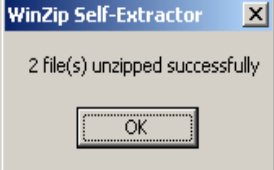 
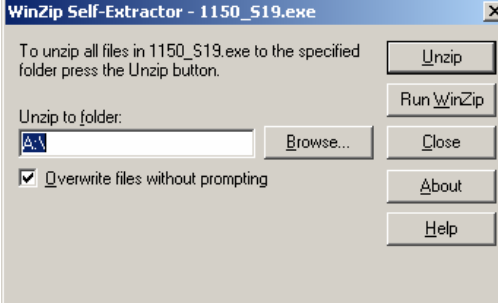 
BIOS Update Instructions

Model – R1200

R1200-SFT16 BIOS:
First shipping bios revision.

Requirements:
USB Floppy
DOS bootable floppy disk
R1200-SFT16.exe

Please follow the instructions in order to update the BIOS on your R-Series blade:

<p>Step 1) Insert a DOS bootable floppy into your floppy drive.</p>	
<p>Step 2) Double click on R1200-SFT16 BIOS utility file.</p>	
<p>Step 3) From the WinZip Self-Extractor dialog, click the <i>Unzip</i> Button.</p>	
<p>Step 4) When the message "2 file(s) unzipped successfully" appears click the OK button.</p>	
<p>Step 5) From the WinZip Self-Extractor dialog click the close button.</p>	
<p>Step 6) With the floppy disk in, restart your computer.</p>	
<p>Step 7) Upon restart, the computer will boot from the floppy driver and automatically update the motherboard's BIOS. Follow the onscreen instructions. If you have any problems during the update process please call 866-652-3400 or e-mail support@clearcube.com for assistance.</p>	