

NIC Installation Instructions

Pro2kXP v8.0 (Intel Drivers)



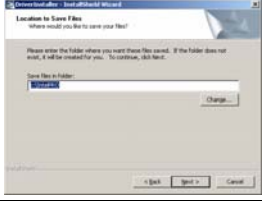


Pro2kXP Install Pack:

Pro2kXP install pack has everything required to install or update your Intel drivers on the R-Series blades. ClearCube updates the website as often as needed, but if you like you can also find the latest NIC drivers on Intel's website.

Requirements for updating your Bios:

ClearCube R-Series Blade (*R1100, R1150, R1200, R2100*)
 Pro2kXP Install Pack (*Intel Drivers and Software*) (*Pro2kXP.exe*)
 If installing on Windows 2000 the setup requires SP4.

Please follow the instructions in order to update or install the Intel NIC drivers:

<p>Step 1) Download the Pro2kXP install pack from http://support.clearcube.com/hardware.htm.</p>	
<p>Step 2) Locate the Pro2kXP executable that was downloaded and double click to execute the Pro2kxp installation package.</p>	
<p>Step 3) Select the first radio button to accept the terms in the license agreement. Then click "Next" to proceed.</p>	
<p>Step 4) Click "Next" to continue with the location to save files.</p>	
<p>Step 5) Click on "Install Software" to install Intel drivers.</p>	
<p>Step 6) Next you will see a status bar. After the install is done you will see the Intel Menu.</p>	

Step 7) Once the Intel Menu screen has appeared click on "Exit".



If you have any problems during the installation process please call ClearCube Support at 866-652-3400 or e-mail support@clearcube.com for assistance.

0205040J