

Topic: PXE Server Overview
Component(s) Affected: Image Manager, PowerQuest ControlCenter
Date: May 23, 2003

OVERVIEW / ENVIRONMENT

PXE (Pre-boot Execution Environment) is a component of Intel's WfM (Wired for Management) specification. It allows users who have a computer with a PXE-compliant network card to run programs from the network prior to booting the operating system on the hard disk.

DESCRIPTION

Network administrators configure a PXE server with network boot programs that users can run on their computers. Users who boot a PXE-compliant computer can select the programs they want to run from a menu of network boot programs.

PowerQuest ControlCenter ST for DeployCenter can install and configure a PXE server that provides client computers with two available boot options:

- **Local boot:** Bypasses PXE and boots the operating system on the hard disk.
- **PowerQuest ControlCenter ST Task:** Runs a task that the network administrator sets up in ControlCenter ST.

For example, a task may consist of deploying an operating system to computers with blank hard disks or upgrading their existing operating system. Another task may consist of upgrading a machine's BIOS.

Using PowerQuest's PXE Server in conjunction with ControlCenter ST, network administrators can define a task, and then they can instruct users to reboot their machines and choose the task from the PXE boot menu. Because a network administrator manages the deployment of tasks from ControlCenter ST, it is typically not necessary to change the configuration of PXE Server.

RESOLUTION

Using PXE in Conjunction with ControlCenter ST: The following is a typical scenario for u

1. Using ControlCenter ST for DeployCenter, the system administrator creates a task for selected machines to run. In ControlCenter ST, the administrator specifies that task as the PXE task.
2. Users are informed to reboot their machine and immediately press **N** at the network boot prompt. If users do not press **N**, the machine boots from its local hard disk or floppy disk, as usual.
3. Users select **PowerQuest ControlCenter ST Task** from the boot menu.
4. Each user's machine downloads and runs the selected task. When the task is complete, the machine reboots, and the user continues working.

Note: For a more in-depth look at PXE, please see Intel's PXE PDK document.

For more information, please contact ClearCube technical support.

support@clearcube.com
support.clearcube.com
(866) 652-3400
+1 (512) 652-3400

Email address for ClearCube Technical Support
ClearCube Support Website
Direct line in the US
Direct line from outside the US