

Topic: R2200 BIOS Version 1.96
Component(s) Affected: R2200 Blade
Date: September 22, 2006

OVERVIEW / ENVIRONMENT

This Technical Bulletin provides information to accompany the first release BIOS for the R2200 blade.

DETAILED DESCRIPTION

The first release BIOS for the R2200 blade is version 1.96.

RESOLUTION

To install R2200 BIOS version 1.96, you need the following:

- USB floppy drive
- Bootable DOS floppy disk
- The update BIOS file `DX196U5.WPH`
- The `phlash16.exe` flash utility

To install R2200 BIOS version 1.96, do the following:

1. Download the `DX196U5.zip` file from the ClearCube Support website. This file contains the BIOS file `DX196U5.WPH`, the `phlash16.exe` flash utility, and this Technical Bulletin.
2. Plug the USB floppy drive into the USB port on the front of your Blade, and insert the boot floppy disk.
3. Unzip this file and copy the `phlash16.exe` and `DX196U5.WPH` files to a bootable floppy drive.
4. Restart your system on the floppy drive and enter the following command:
`phlash16 DX196U5.WPH`
5. After upgrading to the `DX196U5.WPH` BIOS, shut down and restart the Blade when the upgrade has completed. Disregard the `phlash16` on-screen message `press any key to restart....`

For more information, please contact ClearCube technical support.

support@clearcube.com
support.clearcube.com
(866) 652-3400
+1 (512) 652-3400

Email address for ClearCube Technical Support
ClearCube Support Website
Direct line in the US
Direct line from outside the US