



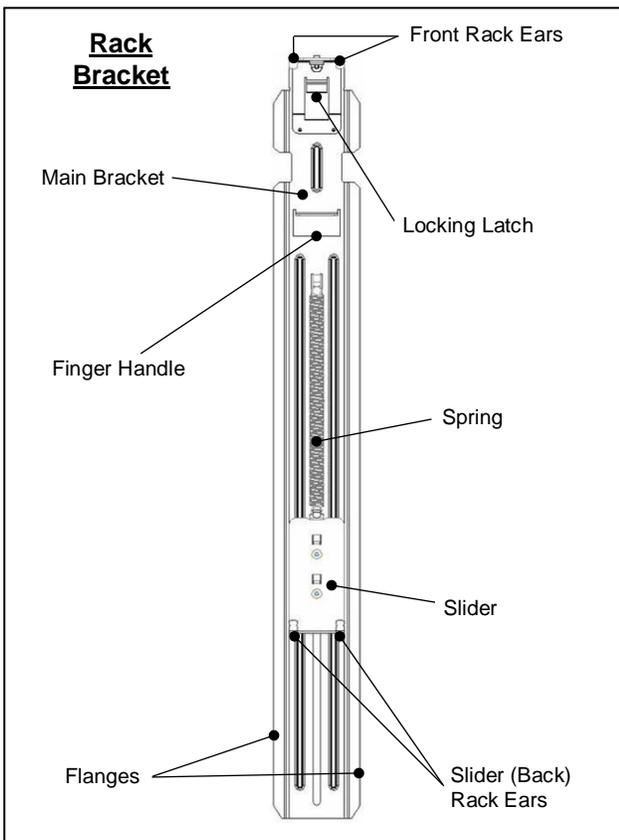

CLEARCUBE

Chassis Rapid Mounting Kit Quick Start Guide

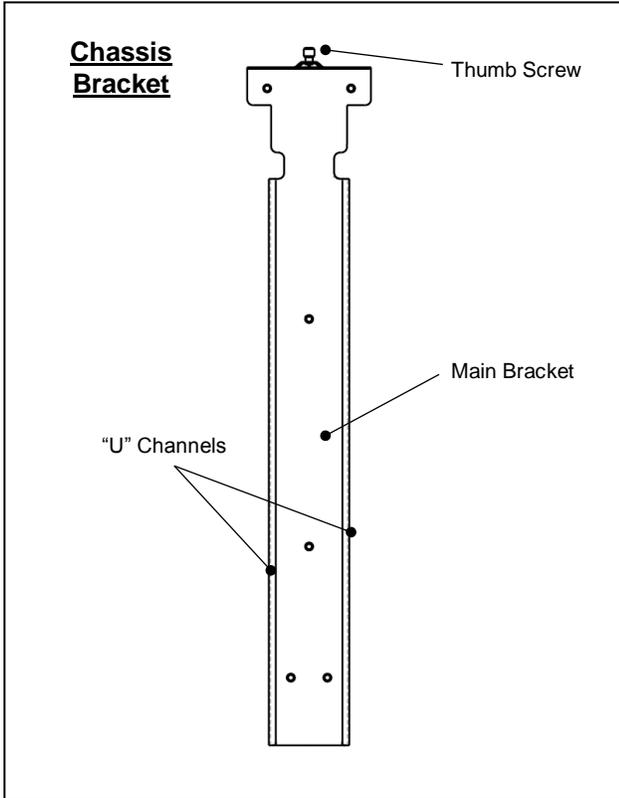


Caution


- This system is only for use with square hole, 4-post racks with front to back spacing of 21.25 inches to 29.25 inches.
- A fully-loaded chassis is heavy. Always use proper lifting techniques to install and move the Chassis Rapid Mounting Kit (CRM). Two people should install and move the CRM.
- Remove all PC Blades from the chassis prior to installation or removal.
- Chassis mounted in a rack using a CRM Kit are designed to *remain stationary* after being secured to a rack using the CRM thumb screws. CRM Kits are not designed to enable chassis to be extended to serve as a shelf or support.
- Fully extending the chassis removes the chassis from the rack. Ensure the chassis is adequately supported before fully extending or removing it. Otherwise, the chassis may fall and can cause damage and injury.
- The Chassis Rapid Mounting Kit must only be used if all components are installed and functioning properly. This includes the slider, spring, latch and brackets (see adjacent figures for component details).
- Observe Equipment Warning labels.

Installation Procedure

1. Mount the Chassis bracket to Chassis with 6 flathead screws (partially shown below). Repeat on other side of Chassis.

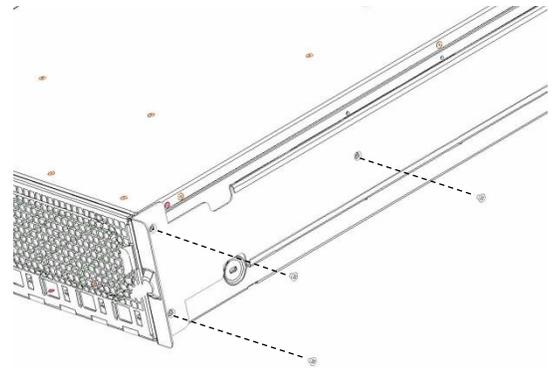


2. Determine the hole locations on the rack that will be used to mount the rack ears on the bracket (use the included alignment guide for assistance). Insert the slider (back) rack ears on the bracket into the holes on the rear post of the rack.

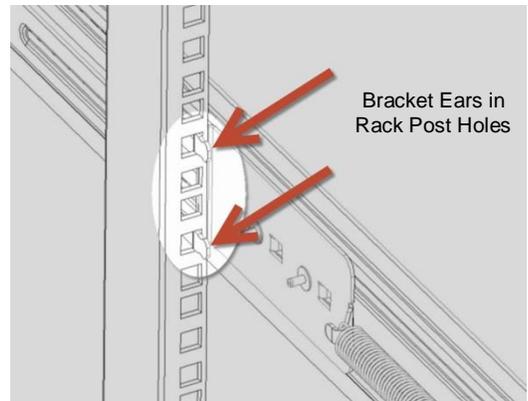




3. Pull rack bracket forward and insert the front rack ears on rack bracket into the holes on front side of front post. Push forward on ears until the latch snaps and locks the bracket into place. Ensure the bracket is level by checking that the front ears are inserted in to the same height rack holes as the back ears.

 To remove a bracket, pull the locking tab inward with a finger and disengage the front ears from the rack. (SEE CAUTION NOTES ABOVE)


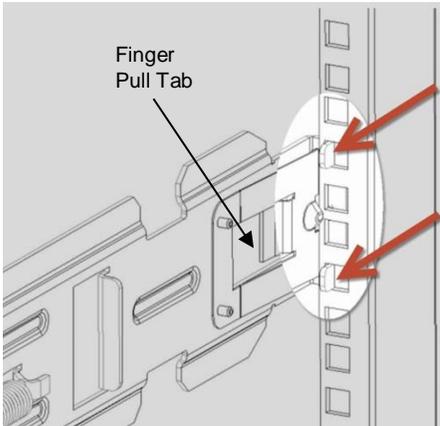


4. Repeat steps 2 and 3 with the other Chassis bracket on the opposite side of rack. Ensure brackets are at the same height with respect to each other.


NOTE: brackets are interchangeable left to right.

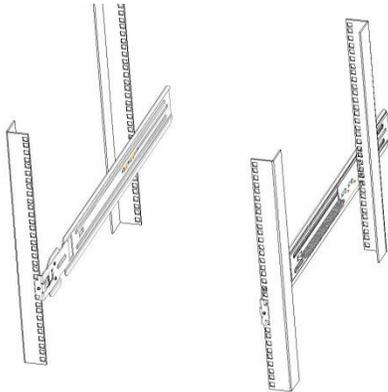


5. Lift the Chassis and align the open "U" channels on the Chassis Brackets with the flanges on the Rack Brackets.

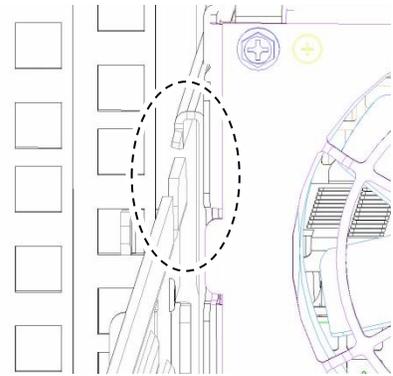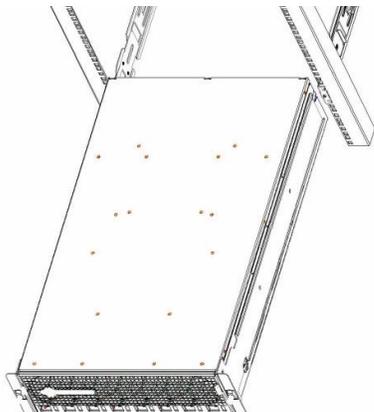

6. By pushing on the front of the Chassis, slide the Chassis Brackets onto the Rack Brackets until the Cage Bracket is flush with front of the Rack.

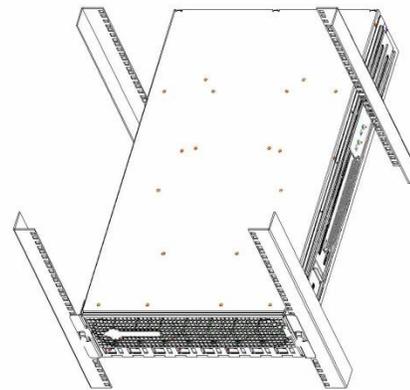

7. Secure the Chassis Bracket to the front of the rack using the thumb screws. Fully tighten them with a Phillips head screwdriver.

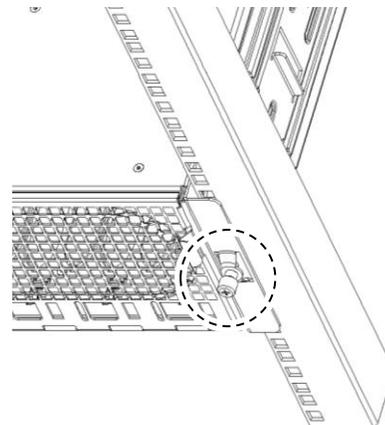

The chassis and CRM are now installed and ready to use.

ClearCube Support

Web	www.clearcube.com/support/
E-mail	support@clearcube.com
Toll-free	(866) 652-3400
Direct	(512) 652-3400