



R3082D PC Blade Quick Start Guide

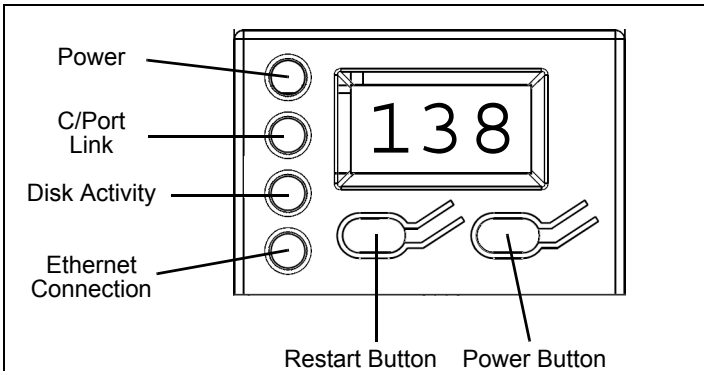

CLEARCUBE

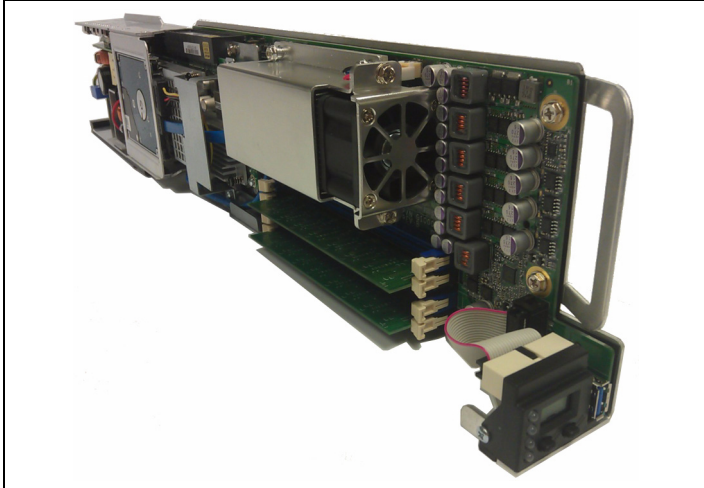

The following table details the front panel indicators shown above.

LED	State	Description
Power	Green	Blade is powered on.
	Off	Blade is powered off.
C/Port	Green	C/Port is connected and link is good.
	Red	C/Port is not connected or link is bad.
<p>NOTE: If a C/Port is not connected to the blade, the C/Port LED is not applicable and is always red. This LED provides no information about PCoIP® links. If you are using a zero client, see the zero client's LED for link status information.</p>		
Disk	Green	Flashing indicates hard disk activity.
	Off	No hard disk activity.
E-Net	Green	10/100/1000 Mbps link. Flashing indicates activity.
	Off	No link.


R3082D Overview

In typical ClearCube environments, R3082D blades are centrally-located in data centers. Each blade user has a user port (such as a ClearCube zero client, ClearCube C/Port, or thin client) on their desk connected over a network to an R3082D blade. User ports provide the interface to the blade (monitor, keyboard, mouse, and so on).

Inserting an R3082D in a Chassis

Install R3082D blades in a ClearCube R4300-series chassis to provide power, network connections, and more.

CAUTION Never force blades into a chassis. Mishandling blades can cause critical hardware failure, data loss, or both.

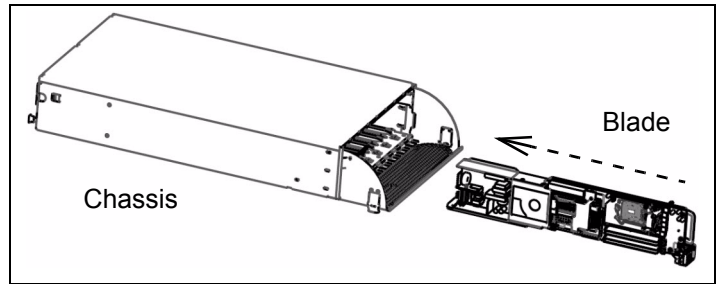

If you have an R4200-series chassis, contact ClearCube Sales to determine the R3082D features that your chassis supports.

Powering on and Restarting an R3082D

When you insert an R3082D in a chassis, the blue LCD and green power indicator are illuminated, indicating that the blade power is in a standby state.

To power on the blade, press the **Power** button located on the right-hand side of the LCD panel, as shown in the adjacent figure.

To restart the blade, press the **Restart** button, located on the left-hand side of the LCD panel.

Powering on for the First Time

These instructions assume that devices are on a LAN on the same subnet and that SLP is permitted. Powering on an R3082D for the first time displays the operating system out-of-box experience (OOBE). Record the hostcard MAC address displayed on a label on the side of the blade. Insert the R3082D in a chassis (described above). Connect an Ethernet cable to the secondary port on the back of the chassis that corresponds with the slot that the blade is in (see the chassis network module figure on the following page). Connect the other end of the cable to the RJ45 port on the rear of a zero client. Power on the blade and the zero client and monitor. Connect to the host by selecting the hostcard's MAC address displayed on the monitor. After connecting, you can complete the OOBE.

Powering Down an R3082D

To power down the R3082D, gently press the power button. You can then remove the blade from the chassis as described below.

—Continued on Reverse—



Removing an R3082D from a Chassis

To remove an R3082D from a chassis, open the chassis door and press the power switch, located on the right-hand side of the LCD panel. Wait for the green power light to turn off.

CAUTION Always completely power down a blade using the power button or by shutting down the OS before removing it from a chassis. Removing a blade before completely powering down can cause critical hardware failure, data loss, or both.


Hold the blade by the handle and pull back to remove the blade. Support the rear of the blade as you remove it from the chassis.

CAUTION Never forcefully remove blades from a chassis. Mishandling blades can cause critical hardware failure, data loss, or both.

CAUTION Use care when handling blades; some surface might be hot.

Network Cabling

The rear of a ClearCube chassis (shown below) provides up to 2 Gigabit Ethernet ports (1 primary port and 1 secondary port) for each blade, depending on video card configuration.

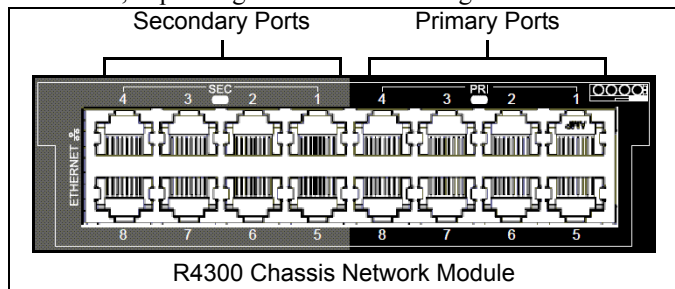

Video Host card with PCoIP® technology: For blades with this video configuration, the primary port is Gigabit Ethernet and the secondary port is for PCoIP communication. For example, if the blade is in slot 3, primary port 3 provides Gigabit Ethernet and secondary port 3 provides PCoIP communication.

Onboard graphics: For blades with onboard graphics, the primary and secondary ports of the slot that the blade occupies are Gigabit Ethernet. For example, if the blade is in slot 3, primary port 3 and secondary port 3 provide Gigabit Ethernet for the blade.

OS Network Connections Mapped to Chassis NICs

After you insert a blade in a chassis, your Windows operating system shows two network connections in the Network Connections window (click **Start > Control Panel** and then double-click **Network Connections** to display connections). The following table shows how each network connection that your OS displays is mapped to the Ethernet ports (Primary & Secondary) on the rear of the chassis (shown in the figure above).

LAN Connection in OS	Port on Chassis Rear
Local Area Connection	Primary port
Local Area Connection 2	Secondary port

C/Port Cabling


When connecting a C/Port to an R3082D, use the C/Port connector on the Connect Bay Module that corresponds to the slot that the blade is in (the Connect Bay Module is located on the rear of the chassis on the far left side).

BIOS Screen Access

To view pre-OS video and BIOS screens, connect a blade and a zero client as described in “[Powering on for the First Time](#),” above. After connecting to the blade, restart the blade by pressing the host power button on the rear of the zero client or by pressing the reset button on the front of the blade. Press **F2** to enter Setup when the prompt is displayed. To disable or change the length of the boot pause screen (which enables USB device enumeration for BIOS screen access), choose **Boot > Access to BIOS from Cloud Desktop** from the BIOS Setup Utility. The default is 15 seconds.

Mass Storage Lockout (MSL)

The R3082D motherboard provides a jumper for mass storage lockout (MSL). MSL is *disabled* by default. When *enabled*, MSL prevents users from connecting mass storage devices (USB drives, flash drives, and so on) to user ports connected to the blade. The MSL header is JP6, located below the video card and to the right of the Ethernet port on the bottom edge of the blade. (The CMOS header is immediately below the MSL header; ensure that you move the jumper on the top-most header, not on the CMOS header.)

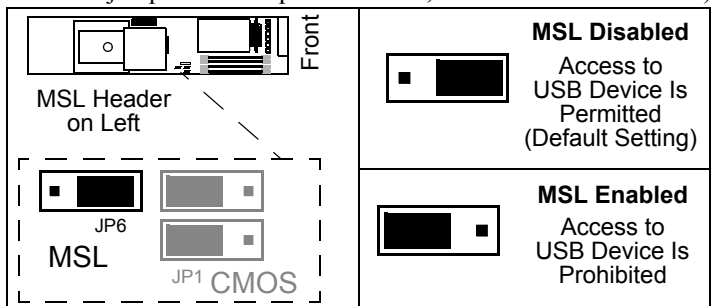

Memory Modules

The R3082D contains 4 slots for DDR3 1600 and 1333 memory modules (for 32 GB maximum system memory). A minimum of one memory module is required. ECC DIMMs are not supported.

NOTE Most 32-bit operating systems support a maximum of 4 GB of RAM.

Additional Information about R3082D

See *R-Series Data Center Products User’s Guide* at www.clearcube.com/support/ for more information about these topics, and for additional information about using and configuring the R3082D. See *PCoIP System User’s Guide* for information about host cards and zero clients with PCoIP technology.

Email: support@clearcube.com Web site: www.clearcube.com/support/
Toll-free: (866) 652-3400 Phone: (512) 652-3400

WEEE Disposal Guidelines: In the European Union, this electronic product falls under the European Directive (2002/96/EC) WEEE. When it reaches the end of its useful life or is no longer wanted, do not discard it with conventional waste; dispose of it at an approved designated recycling and/or treatment facility. Laws are different in each country, so please check with your local authorities for proper disposal instructions. For assistance, contact ClearCube at recycle@clearcube.com

